



# HOW TO MEASURE FOR ROLLER BLINDS

Easy step-by-step way to measure your windows.

1. Only use a steel measuring tape.
2. Measurement must be accurate.
3. Always measure the width first and write it down before measuring the drop.
4. Measure the drop and write it down.
5. Now re-check your width and drop measurements.

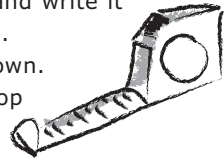

## Outside Mount or Face Fix (F.F.) Blind.

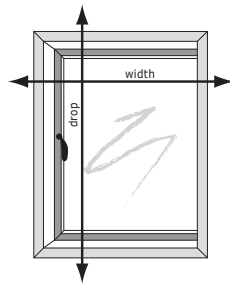

The blind hangs outside the window opening and covers an area larger than the window itself.

### Width Measurement.

Without wood frame or architrave. Measure the width you require to cover. Measure 50mm past either side of the window opening for greater privacy. With wood frame or architrave. Measure the width you require to cover. Measure from the outside edge of the wood frame or architrave across the window opening to the outer edge of the wood frame or architrave.



## Drop Measurement.

Without wood frame or architrave. Measure the drop you require to cover. Measure 50mm past top and bottom for greater privacy - or to the top of the sill or to the floor.


With wood frame or architrave. Measure the drop you require. Measure from the top of the architrave to 50mm past the bottom architrave for greater privacy cover or to the bottom of a protruding sill or to the floor. Measure three-drop measurements. Left side, the middle and the right side and only write down the smallest measurement of the three. This is to ensure that the window is not out of square.

## Inside Mount or Recess (R.) Blind.

### Please Note

Measure depth of recess (R) to ensure that the roller blind has adequate room to operate-roll up (pulled up), allowing for any door or window handles.  
( ALLOW A CLEAR 50MM )

The blind hangs inside the window frame and covers the window opening exactly.

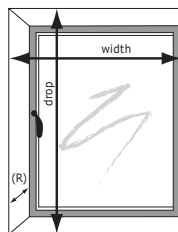

### Width Measurements.

Measure the exact width and again measure at three points on the window top, middle and bottom portion to ensure that the window is not out of square. But only write down the smallest measurement.

### Drop Measurement.

Measure the exact drop measurements at three points on the window. Left side, middle and right side to ensure that the window is not out of square. But only write down the smallest measurement.

## Roller Blind Controls.

### Spring Motor or Side-Winder

(with control chain)

Check your window or sliding door opening before making your selection. If it opens left to right- select roller side-winder blind controls to be on the right side. This is called a right controls (R.C.) If it opens right to left- select the roller side-winder blind controls to be on the left side. This is called a left controls (L.C.)

Sliding doors left side opening -two blinds are required. Left side blind with left hand controls (L.C.) right hand side blind is recommended to have right hand control.

Sliding door right side opening-two blinds are required. Right side blind with right side controls (R.C.) left hand side blind with left hand controls. If the window or sliding door opens from the centre to each end. This is called a centre-opening window - it is recommended that three roller blinds are used for this window or sliding door opening.


### Roller Blind Collection.

Select from designer range of fabrics and decorative trims.

### Important

Only supply exact measurements in millimetres. The factory will make allowances to ensure a proper fit.

**YOU MEASURE, YOU FIT,  
YOU SAVE!**



**Vista**  
WINDOW COVERINGS

Phone: 13 16 13  
www.vistablinds.com.au